

Enable Savox Promate BT COM on TLK100i

1 Choose WAVE Devices in the WAVE Admin menu and select the device you want to modify. (Click on the TLK100i that you want to modify in the overview)

2 Select Actions.

3 Select Bluetooth Accessories

Device Info

	Reported	Desired
Device Type	TLK100i	-
IMEI	354124100009653	-
Serial Number	341AVJ0244	-
Cellular Status	Activated	-

ATTENTION: If Bluetooth is not enabled, you must do this first under Settings and Menu Visibility.

MOTOROLA SOLUTIONS

Brightness Level 1

Device Mode user

Maintenance Mode PW -

Voice Announcements On

Location On

WiFi On

Cellular On

Bluetooth On

Scan Off

Do Not Disturb Off


Menu Visibility

	Reported	Desired
Location	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Alert Tones	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Voice Announcements	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Brightness Level	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Do Not Disturb	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
WiFi	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Cellular	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Bluetooth	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Scan	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Contacts	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

When this is done, you can add Bluetooth accessory:

Up in the right corner, now select Bluetooth Accessories (Step 3)

You need to enter the name Savox BT COM and pin code 0000.

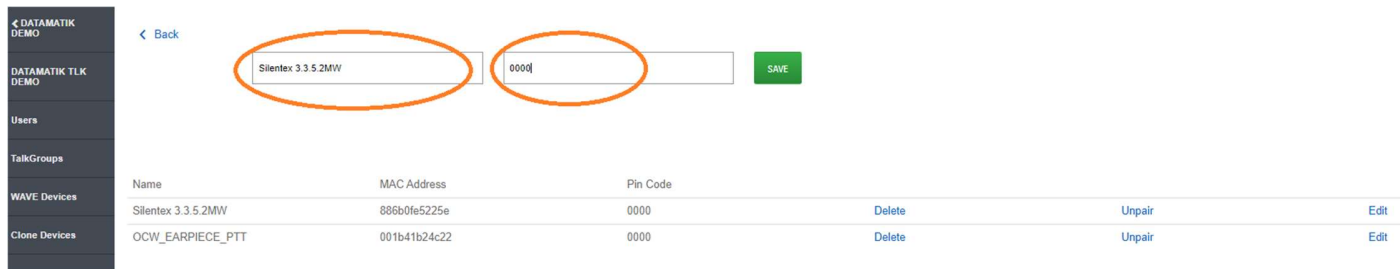

Name	MAC Address	Pin Code	Delete	Unpair	Edit
Silentex 3.3.5.2MW	886b0fe5225e	0000	Delete	Unpair	Edit
OCW_EARPIECE_PTT	001b41b24c22	0000	Delete	Unpair	Edit

Save the settings and the earpiece can be connected.

The Savox Promate BT COM shall be set into LTE mode (Default Mode is LTE mode, pin code 0000)
When powered on the first time, the device goes to pairing mode automatically.

Put the TLK100i in pairing mode by pressing the INFO button repeatedly until you hear Bluetooth searching.

Then all is set and the Savox Promate BT COM works.